Stimuplex® HNS 12

Nerve Stimulator for Peripheral Regional Anesthesia



(€ 0366

GB User manual



Manufacturer: Distributor: In the US and Canada distributed by:

STOCKERT GMBH B. Braun Melsungen AG B. Braun Medical Inc. Bötzinger Straße 72 **Hospital Care Division** 824 Twelfth Avenue 79111 Freiburg 34209 Melsungen

Bethlehem, PA 18018-3524

Germany Germany

Telefon: +49-(0)761-20716-0 Telefon: +49-(0)5661-71-0 Phone: 1-800-854-6851 Telefax: +49-(0)761-20716-20 Telefax: +49-(0)5661-71-4845 Fax: 1-610-758-9020

Email: Info@stockert.de Email: inquiry@bbraunusa.com http://www.stockert.de StimuplexHNS12@bbraun.com http://www.bbraunusa.com/stimuplex

http://www.bbraun.com

Caution:

The Stimuplex® HNS 12 may only be used in applications for which this product is intended. Federal (US) law restricts this device to sale by or on the order of a physician.

Stimuplex® HNS 12 User manual

Order number: 6043570 - Rev. D - valid for software version 1.003.x

Meliseptol®, Stimuplex® and Contiplex® are registered trademarks of B. Braun Melsungen AG

Contents 3

	Contents	Page
	Preface	
1.	Principles of peripheral electrical nerve stimulation (PNS)	
1.1	Area of application	
1.2	Indications	
1.3	Contraindications	
1.4	Warnings	
1.5	Constant voltage or constant current	11
2.	Description of the device	13
2.1	Checks before start-up	15
2.2	Technical description	17
2.2.1	Plug Connections	17
2.2.2	Current regulator (dial and keys)	
2.2.3	Single-handed remote control (Stimuplex® Remote Control)	19
2.2.4	Sound	20
2.2.5	LED	20
2.2.6	Display modes	21
2.2.7	Menu structure	22
3.	Operation of the Stimuplex® HNS 12	24
3.1	Switch on / Switch off (ON/OFF)	
3.2	Selecting the current adjustment range	25
3.3	Selecting the stimulation current	25
3.4	Selecting the stimulus duration	26
3.5	Selecting the stimulation frequency	27
3.6	Current threshold display	28
3.7	Checking the battery voltage	28
3.8	Additional information – Menu info	28
4.	Setting parameters and options for future switch-on procedures	29
4.1	Setting switch-on values for stimulation parameters	
4.1.1	Current adjustment range	
4.1.2	Stimulus duration	
4.1.3	Frequency	30
4.1.4	Current threshold display	
4.2	Setup	
4.2.1	Tone	
4.2.2	Dial turns	31
4.2.3	Contrast on the LCD display	32

	Contents	Page
4.2.4	Automatic switch off	32
4.2.5	Date and time	
4.2.6	Language	
4.2.7	Options	
	Factory standard	
	Displaying the electrical charge of the stimulation pulse (electrical charge nC)	
	Current adjustment	
	Additional stimulus duration	
4.2.7.5	SENSe option	34
5.	Initial setup, maintenance and notes	35
5.1	Testing the Stimuplex® HNS 12	35
5.2	Special technical features	35
5.3	Technical data	36
5.4	Battery	
5.5	Cleaning and disinfecting the Stimuplex® HNS 12	37
5.6	Maintenance and safety checks	37
5.7	Equipment logbook	
5.8	Notices, warranty	
5.9	Error messages	
5.10	Instruments and accessories	
	Stimuplex® HNS 12 and Accessories, Spare parts, Stimuplex® and Contiplex® need	les41
6.	References	44
7.	Appendix	45
8.	Symbols on Stimuplex® HNS 12	52
9.	Electromagnetic compatibility (EMC)	53
10.	Specific requirements for the US market	E0
10. 10.1	Addition to Page 37 of the Manual – "5.6 Maintenance and safety checks"	
10.1	Change from Page 38 of the Manual – "5.8 Notices, warranty"	
10.2	Change from Page 38 of the Manual – "5.8 Notices, warranty"	
10.4	Change from pages 40 – 42 of the User manual –	
10.7	"Stimuplex® HNS12 and Accessories, Spare parts, Stimuplex® and Contiplex® need	

Preface 5

With your purchase of the Stimuplex® HNS 12 nerve stimulator, you have acquired a device that is easy to operate and provides you with a straightforward array of all the functions you need to perform peripheral nerve blocks.

The following chapters describe the operation of Stimuplex® HNS 12.

The use of the stimulation needles required for performing stimulation is described in the instructions for use accompanying the needles, which are not part of this user manual.

Chapter 1 describes the basic functions of unipolar nerve stimulation including a discussion of the principle of constant current stimulation.

For your study of its operational fundamentals, we recommend that you have a Stimuplex® HNS 12 with all of its accessories at hand and functional so that you can learn about the functions in practical exercises.

It is helpful to simulate the patient with a wet paper tissue or a small sponge soaked in saltwater. The saline solution is required to produce electrical conductivity.

The device may only be operated in compliance with the user manual.

If you have further questions, the people at B. Braun Melsungen AG and STOCKERT GmbH are happy to be at your service.

Yours, B. Braun Melsungen AG STOCKERT GmbH

1.1 Area of application

Peripheral nerve stimulation facilitates the performance of peripheral nerve and plexus blocks. The user no longer needs to rely on feedback from the patient about paresthetic sensations. The danger of mechanical nerve lesions is mostly eliminated.

When the stimulation needle is placed sufficiently close to the target nerve, predefined electrical pulses generate muscle contractions at motor efferent fibers and electrically elicited paresthesias at sensory afferent fibers. During this procedure, direct contact of the injection needle with the nerve is intentionally avoided.

The nerve stimulator is intended only for the pre-operative localization of nerves; under no circumstances may it be used on a patient undergoing surgery.

Since peripheral electrical nerve stimulation (PNS) is no substitute for the anatomical knowledge required to perform regional anesthesia, accurate knowledge of the topography and nerve distribution area is a prerequisite.

Advantages of nerve stimulation:

- Objective muscle response is obtained without the user having to rely on information or cooperation from the patient
- No direct needle-nerve contact, no painful paresthesias, no mechanical nerve lesions, and no intraneural injections.

Permissible and possible options:

- Sedation and analgesia prior to blockade depending upon the patient's needs
- General anesthesia prior to blockade
- Blockades distal to the previous site of a regional anesthesia procedure in anesthetized or partially anesthetized regions
- Extension of the indication spectrum
- · Enhancement of safety standards

The resting potential at the nerve membrane is around 80 mV. The cell's interior is negatively charged compared to the surrounding medium. Sufficiently large ion movement reduces the membrane potential to 55 mV, making the membrane freely permeable and generating an action potential.

The various types of nerve fiber differ with regard to their sensitivity to electrical stimulation. The Aalpha motor fibers have the shortest chronaxia (50–100 μ s). The afferent fibers that transmit pain sensation (A δ and C-fibers) require a longer pulse (150 and/or 400 μ s) at a minimum current. Mixed peripheral nerves can be localized using short pulses (0.10 ms) without triggering pain sensations. For pure sensory nerves, a longer pulse is recommended (0.30 ms, 0.50 ms or 1.00 ms).

When unipolar needles (insulated and with conductive tip) are used, the current necessary to trigger

7

Nevertheless, it is important to observe and stay within the predefined threshold currents so as to avoid a too close proximity to the nerve and prevent nerve damage.

The shorter the electrical pulse (= pulse width), the faster is the rise in current to the nerve. This allows better discrimination by the physician as to whether the needle tip is sufficiently close to the nerve. The stimulation needle should always be connected to the negative pole. If the needle is connected to the positive pole, higher currents are required.

The conductive tip of the stimulation needle affects the geometry of the electrical field. The smaller the emission site of the electrons at the tip of the needle, the higher is the current density at this point and the lower the threshold level once the nerve has been localized exactly.

1.2 Indications

- Surgical interventions on the upper and lower extremity
- Patients with high aspiration risk
- Hemodynamically unstable patients
- Postoperative analgesia to allow early mobilization and physical therapy
- Replantation surgery
- Diagnostic and therapeutic blockades

1.3 Contraindications

- Refusal of regional anesthesia by the patient
- Infection at the puncture site
- Preoperatively known neurological dysfunctions
- Anatomical abnormalities
- Severe coagulation disorders
- Insufficient liver function

1.4 Warnings

Warnings and precautionary measures

General precautionary measures:

The connecting socket of the stimulation needle may only be connected to the counter plug of the connecting cable. The connecting cable plug may only be connected to the nerve stimulator and the

clip may only be connected to the skin electrode on the skin of the patient. Under no circumstances should you allow these plugs/connections to come in contact with voltage channeling components (e.g. electrical outlets) or metallic objects.

To prevent anesthesia gases from exploding or flammable liquids from igniting, Stimuplex® HNS 12 may not be used in hazardous areas. To avoid injury to the patient, all ported equipment in the vicinity of the patient must comply with the applicable rules and regulations. All equipment and accessories must show compliance with EN 60601-1, EN 60601-1-1 as well as the applicable collateral standards. The user should be aware that, even when all rules are complied with for each piece of equipment, under worst circumstances, all leakage currents or auxiliary patient-coupled currents can add up and produce unacceptably high levels that can endanger the patient. The user must therefore check in advance whether the interconnected equipment might exceed allowable limits under certain circumstances. Devices and equipment (system building) assembled improperly can cause life-threatening injury to the patient.

The patients themselves should not come into contact with metallic objects that are grounded or produce an electrical conductive connection with other equipment and/or enable capacitive coupling. On these grounds, we recommend that an adequately insulated, antistatic pad be placed on the operating table.

Warnings and precautionary measures for Stimuplex® HNS 12

Under no circumstance should the device be operated with accessories other than those released and supplied by the manufacturer or listed in Section 5.10, "Instruments and accessories". These accessories are EMC tested and approved. Any other accessories can lead to serious impairment of the device and system properties and cause permanent injury to the patient, user or device.

Whenever high frequency surgical equipment is used simultaneously, there is an acute danger of severe burns occurring at the Stimuplex® HNS 12 connection ports, the connecting cable, the tip of the needle and at the skin electrode. It is therefore imperative to disconnect all connections to Stimuplex® HNS 12 before using high frequency surgical equipment and to also remove the stimulation needle from the tissue. The stimulation needle with its connecting cable acts like an antenna for high-frequency energy; this can generate very high current densities at the needle tip and cause irreversible destruction to the nerve fibers in this proximity. At the same time, the ported stimulator can rectify the high frequency energy, which leads to extremely high direct currents and voltage potentials at the electrodes. The direct current stimulation generated as a result can be very painful and strong, and trigger irreversible electrophysiological reactions.

To prevent poor contact of the skin electrode (red clip) from leading to a malpositioning of the stimulation needle, the user must make sure that the skin electrode, which functions like a neutral electrode here, shows sufficiently safe contact with low tissue impedance. Fatty tissue, hair, dirt, repeatedly-used skin electrodes and electrodes of poorer quality can negatively impact tissue impedance, thereby incurring the risk of neural damage. It is therefore recommended to select the contact sur-

face carefully in well-vasculated muscular areas only. Clean, shave and degrease the skin. At the same time, do not position the skin electrode too far away from the puncture site. However, thoracic application of the skin electrode is to be avoided.

The skin electrodes must not be applied to areas of injury.

Only use high-grade, commercially available, CE-marked ECG single-use skin electrodes with silver/silver chloride sensors precoated with gel. For non EU countries, CE marking is not required on ECG skin electrodes. To achieve optimum nerve stimulation always make sure the electrodes are undamaged and not dried out.

The nerve stimulator should not be used on patients with implanted electrical devices (e.g. cardiac pacemakers) without prior consultation with an appropriate medical specialist. The stimulation current may cause interference with the implanted devices and thereby put the patient at risk. The perithoracic application of electrodes (around the ribcage, heart) can increase the risk of cardiac fibrillation.

The stimulation current should not drop below a specific value. By activating the option "Current threshold" (see Section 3.6), the Stimuplex® HNS 12 alerts you with an optical and acoustic warning whenever the stimulation current is out of tolerance.

If the stimulator shows a direct current or an offset direct current at the outlet, the stimulator should not be used and must be returned to the manufacturer for repair.

The special precautionary measures specified by the EMC standard apply to electrical medical devices. Portable and mobile HF communication devices can affect Stimuplex® HNS12 which can lead to functional failure of the device and/or system.

Dynamic electrical and dynamic magnetic interference fields can cause interactions between device and system to occur which can impact the actual stimulation current measurement and, in extreme cases, lead to error messages and possibly to the activation of a safety shut-off on the device. Do not use Stimuplex® HNS 12 in the proximity of equipment that produces strong electromagnetic fields such as cordless phones, HF high frequency surgical equipment, short-wave or microwave medical equipment. The stimulation needle may pick-up high frequency currents, which could cause damage to nerves.

Do not connect Stimuplex® HNS 12 to other devices. If Stimuplex® HNS 12 is operated near another device, the user must monitor the equipment or system and check that the configuration used in this way is operated properly and as intended.

Other devices can interfere with Stimuplex® HNS 12 or the system, even if they show compliance with the applicable CISPR emission requirements. Interference impulses greater than 3 V/m within the fre-

quency range up to 100 MHz can be picked up by the stimulation current detector and thereby trigger an error display and, possibly, a safety shutoff.

Operation of other devices or systems with Stimuplex® HNS 12 accessories can increase emissions or reduce immunity to interference on devices or systems. Observe the supplied EMC instructions concerning installation, initial setup and operation of the device or system (see Section 9. Electromagnetic compatibility (EMC)).

To avoid damage to the connecting cable and the device, do not hold or carry the device by its connecting cables and/or its accessories. Do not wrap the cable around the device or around other equipment.

Wrapping the connecting cable during normal operation of the stimulator generates inductive components and, at very short stimulation pulses, can lead to a reduction in stimulation efficacy and/or false measurements of the actual stimulation current. False interpretations of the indicated values can be the result.

For safety reasons, never operate Stimuplex® HNS 12 if the battery is leaking, but return it to the manufacturer for proper cleaning. The same applies if any liquid soaks through!

Do not continue to operate the device if repeated error messages appear. The device must be returned to the manufacturer for proper repair.

Avoid contamination at the connections. Water and dirt impair the contact properties of the plug connections and lead to undesired short circuits or leakage currents. This can lead in part or even fully to channeling of the stimulation currents, which impairs or even cancels out the stimulation effect completely. In this event, the device can no longer properly indicate the actual current flowing to the patient.

To prevent damage to the device and its accessories, never use aggressive cleaning agents. For further details, see Section 5.5 "Cleaning and disinfecting the Stimuplex® HNS 12". All accessories have to be visually inspected at regular intervals. The insulation for cable and plug connections must not exhibit any damage.

The user must follow the instructions for use when operating Stimuplex® HNS 12 and its corresponding accessories. When using sterile accessories, always comply with standard sterile precautionary measures.

Avoid any inadvertent contact of the stimulation needle with bone, since this could irreversibly damage the needle and consequently traumatize the tissue.

Keep accessories and device away from voltage-conducting objects. The electrostatic and electromagnetic fields they radiate can impact the stimulation outcome and, under certain circumstances, may lead to adverse stimulation effects in the tissue.

Before and during use, the device, the connecting cable and their plugs must be kept completely clean and dry. Moisture and contamination will impair the function of the nerve stimulator and/or the stimulation outcome.

Be aware of the position of metallic implants in the tissue (e.g. plates or electrode cables), which may potentially channel stimulation signals to other sites where it can cause damaging effects. Implanted electronic equipment can be impaired by the stimulation current, which, in turn, will lead to malfunctions of the implants or even destroy them.

To avoid malfunctions of Stimuplex® HNS 12, check all functions prior to the intervention and make sure that the accessories are in functional order. The accessories must meet safety class type BF. Inspect all parts for any visible damage or manipulations. Never use any damaged or manipulated parts!

To protect the patient from electrophysiological shocks through electrostatic discharges (ESD), it is necessary for them to wear the appropriate clothing and to move around in an appropriately secured environment. An electrostatic discharge (ESD) at the tip of the needle can cause extremely high current densities to occur which can damage the surrounding tissue.

Conformity with the following standards:

EN 60601-1; EN 60601-1-2; EN 60601-1-4; EN 60601-1-6; EN 60601-1-8; EN 60601-2-10; UL 60601; 60812 (FMEA); ISO 9001:2000; ISO 13485:2003; ISO 14971:2000; MPG/Council Directive 93-42-EEC.

1.5 Constant voltage or constant current

According to Ohm's Law I \sim U it is possible to use both voltage as well as current to measure the intensity (amplitude) of the electrical stimulation. One speaks of constant voltage or constant current devices.

The electrical resistance (impedance) in the circuit of a stimulation, which comprises the sum of skin, tissue, needle, electrode cable resistance, etc., fluctuates within a large range. It can move between <1 k Ω and infinity. Factors such as skin moisture, conductivity of the skin and tissue and the potential resistance of the skin electrode can hardly be influenced.

If voltage (V) is selected as a measure of the intensity of the stimulation pulse, currents can flow during treatment that differ greatly depending on the impedance and in accordance with Ohm's Law.

Therefore, it is better to use a nerve stimulator that allows the user to select the desired current (mA) exactly between the two electrodes – skin electrode (anode) and stimulation needle (cathode).

Nevertheless, a stimulator with constant current settings must be equipped with a very high output impedance – ideally infinity – to reduce the resistances possible in the external circuit to negligible levels and to display the actually flowing current accurately. In recent years, constant current devices, which allow selection of the desired current (mA) for the stimulation pulse, have become established.

On the Stimuplex® HNS 12, the external load resistance can be up to 12 k Ω . If this load resistance is exceeded, the nominal current flowing to the patient (actual stimulation current) may be less than the set target stimulation current. In this case, the target stimulation current and the actual stimulation current are displayed separately, and optical and acoustic warning messages are set off. Moreover, the applied impedance is calculated constantly and indicated in the LCD display.

Stimuplex® HNS 12 is a precision instrument for localizing neuronal pathways in the human body. It was specifically designed to stimulate nerve fibers in living organisms with special nerve stimulation needles that conventionally show a very high contact impedance with the aim of determining their spatial position relative to the tip of the needle. The stimulation needles are constructed in such a way that a local anesthetic can be injected near the nerve fiber, which reversibly interrupts stimulus conductance.

The Stimuplex® HNS 12 nerve stimulator should only be used by a physician with an appropriate knowledge in peripheral nerve blocks. The physician is responsible for the correct usage of the nerve stimulator.

The functions of Stimuplex® HNS 12, Stimuplex® and Contiplex® stimulation needles as well as the connecting cable by B. Braun are designed to work in perfect harmony. Only in this way can a optimum of precision and reliability be achieved.


For more in-depth knowledge about the use of this device, its risks and side effects we recommend studying in detail the relevant literature cited in the "References" Section.

Stimuplex® HNS 12 is supplied with the following basic equipment:

- Stimuplex® HNS 12 nerve stimulator
- 9-volt block battery
- Cable for connecting B. Braun stimulation needles (cable length 1.25 m)
- 10 k Ω test resistance
- User manual (this document)
- CD-ROM with user manuals in different languages (PDF files)
- Brief instructions for use
- Storage case for keeping Stimuplex® HNS 12 and accessories

The Stimuplex® Remote Control, the control knob for sterile handling, the Stimuplex® Pen and the Stimuplex® Switch can be purchased separately as accessories and kept safely in the storage case in the intended compartments.

Overview of the Stimuplex® HNS 12 Nerve Stimulator

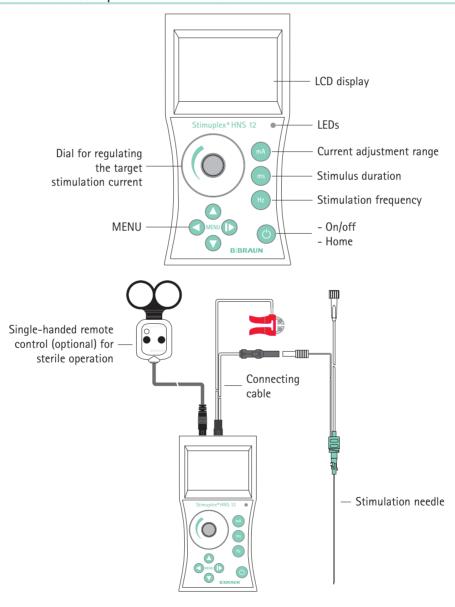

Manufacturer's factory settings configured on delivery (preset in the menu).

Max. desired current - 5.00 mA

Stimulus duration/Frequency - SENSe (see page 17)

Impedance – $k\Omega$ (is calculated automatically)

Range (not displayed) - 1 turn (can only be changed in the menu)

2.1 Checks before start-up

The Stimuplex® HNS 12 is a class IIa medical device according to Council Directive 93/42/EEC. The device should not be used until it has been subjected to an on-site function test and the persons responsible for operating the device are instructed how to use the device with the aid of the user manual.

Before putting the Stimuplex® HNS 12 into operation, carry out the following tests.

Carry out a visual inspection of the electrode cable. Damaged cables must not be used. Connect the electrode cable for connection with the stimulation needle to the front of the nerve stimulator (to the middle 4-polar plug). The plug connector configuration prevents wrong polarity connection.

Check if the battery is installed.

Press the "ON/OFF" key to switch on the Stimuplex® HNS 12. While you are holding down the "ON/OFF" key to switch on Stimuplex® HNS 12, important equipment parameters are indicated in the unit's display. After releasing the key, the device automatically runs a self-test. If the self-test detects a defective function, an error code will appear in the LCD display that switches off automatically after 8 seconds.

A battery symbol appears in the right lower corner of the LCD display that allows a check of the battery voltage. The symbol flashes when the battery voltage drops below 7 V.


The device automatically shuts off when the battery voltage reaches < 6 V.

If no display appears when the Stimuplex® HNS 12 is switched on, change the battery immediately. (Refer to the "Battery" section).

Whenever the battery symbol is flashing, a new 9 V alkaline block battery should be installed immediately to avoid having to abort a stimulator treatment.

Connect the red clip for the skin electrode and the insulated 2-mm male plug for the stimulation needle with the 10 k Ω test resistance (included in the equipment supplied).

The LCD display shows the current operating conditions:

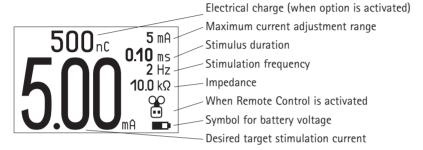

After switching on Stimuplex® HNS 12, the target stimulation current is zero; in other words, no stimulation pulse is generated and the LED is not flashing. If the target stimulation current is > 0.00 mA and the actual stimulation current flowing does not deviate by more than 0.04 mA from the target stimulation current, the green LED lights up (or yellow, if the optionally adjustable current threshold has been undershot) and a stimulation frequency sound becomes audible. The actual current is indicated automatically and only indicated as a warning when it deviates from the target current. In this state, the LED will light up red and a higher-pitch warning signal will be sounded.

Use the dial to set the maximum current of 5.00 mA. No error message should appear at a load resistance of 10 $k\Omega$ (see accessories). The LED flashes green at the selected stimulation frequency. The sound is dependent on the preselected stimulation current, when "sound variable" has been configured in the sound–menu.

Now release the connection between clip and male plug. The warning message "actual current is less than target current" appears, both stimulation currents are displayed (see Section 2.2.6.2 Stimulation mode with warning), the LED flashes red because no current is flowing, and the click or beep sound starts ticking louder at a higher pitch.

To switch off the nerve stimulator, hold down the "ON/OFF" key until the display disappears (switch-off time = 1 second). If the key is released during this switch-off phase, the device switches back to "ON" status. Refer specifically to the Section "Warning and Safety information" before using the Stimuplex ® HNS 12 on a patient. If the device does not behave as previously described, it must not be put into operation. Please contact the manufacturer or distributor listed.

Maintenance on medical equipment may only be performed by the manufacturer or persons explicitly authorized by the manufacturer.

Stimuplex® HNS 12 is designed for regional anesthesia to optimally localize peripheral nerves.

2.2 Technical description

Stimuplex® HNS 12 generates square pulses with selectable stimulus duration and continuously adjustable stimulation current.

The range of adjustment of the pulse current from 0.00 to 5.00 mA peak-to-peak can be reduced to 0.00 to 1.00 mA with the "mA" button. This 1 mA range allows extremely precise adjustments of the stimulation current. The stimulation frequency and stimulus duration can be varied for different applications. The Stimuplex® HNS 12 nerve stimulator features the option of selecting a frequency of either 1 Hz, 2 Hz or 3 Hz for SENSe and a stimulus duration of 0.05 ms – 0.10 ms – 0.30 ms – 0.50 ms – 1.00 ms.

The Stimuplex® HNS 12 measures the tissue impedance and displays it in $k\Omega$. This measurement allows for a guick check and visualization of the current state of the circuits.


Sequential electrical nerve stimulation (SENSe) technique utilizes an alternating sequenced stream or series of three electrical pulses of varying pulse duration at any given amperage. The two accurate 0.1 ms pulses are sequenced with a pulse of longer duration (e.g. 0.3 ms). A longer duration pulse elicits motor responses at greater distance at lower frequency, increasing sensitivity. The shorter pulses maintain the accuracy underlying successful nerve location, whereas the longer duration pulse enables stimulation at a greater distance. Therefore, SENSe maintains specificity and accuracy, while increasing sensitivity. Clinically, this translates into more motor response information at distance from the nerve. Moving the needle toward the nerve increases the strength or frequency of the motor response. In the clinical setting, SENSe gives more continuous feedback and markedly diminishes the disappearance of motor responses once they are encountered. Therefore SENSe automatically increases visual clues and feedback during nerve location by needle movement alone with less necessity to adjust the amperage control of the nerve stimulator.

SENSe mode can be activated in the "Options" menu. SENSe is valid for software version 1.003.x or newer only.

2.2.1 Plug Connections

Two polarized plug connections are located on the front of the nerve stimulator:

- 3-polar plug for connecting single-handed remote control (Stimuplex® Remote Control can be operated under sterile conditions)
- 4-polar plug for connecting the electrode cable to the stimulation needle and skin electrode or the Stimuplex® Switch.

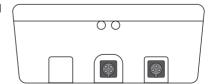

2.2.2 Current regulator (dial and keys)

Current regulator (dial):

The current regulator (dial) is used to adjust the target stimulation current. The dial can be turned infinitely, but is graduated. The maximum currents (5 or 1 mA) can be achieved either with 2 turns, or 1 Dial (factory setting).

The settings 1 or 2 dial turns are configured in the "Setup" menu, "Dial turns". For maximum accuracy, select the two turn configuration and use the intermediate steps between the stops.



1 Dial turn

5.00 mA range - Resolution = 0.02 mA from 0.00 mA to 0.49 mA

- Resolution = 0.10 mA from 0.50 mA to 1.90 mA

- Resolution = 0.25 mA from 2.00 mA to 5.00 mA

1.00 mA range - Resolution = 0.02 mA from 0.00 mA to 5.00 mA

2 Dial turns

5.00 mA range - Resolution = 0.01 mA from 0.00 mA to 0.55 mA

- Resolution = 0.10 mA from 0.60 mA to 5.00 mA

1.00 mA range - Resolution = 0.01 mA from 0.00 mA to 1.00 mA

Keys:

"mA" key: Sets the desired stimulation current range.
"ms" key: Sets the desired stimulus duration.
"Hz" key: Sets the desired stimulation frequency.
"ON/OFF" key: On and off switch for the Stimuplex® HNS 12.

Briefly press the "ON/OFF" key: To jump from the menu mode to the normal stimulation

mode or to immediately delete a potentially existing marking in the stimulation mode (e.g. 5.00 mA).

• MENU arrow keys: For navigation and settings in the menu.

The Stimuplex® HNS 12 is very user friendly in its handling. It features a menu structure with "Main Menu" and "Setup" with which the user can configure user settings, such as switch-on settings, volume and tone pitch, dial resolution, display contrast, automatic switch-off time, date, time and language as well as further options. Navigation through these menus is done with the arrow keys.

Right arrow:

Is used to activate the Main Menu or submenus and select or confirm an option.

Up and down arrows (Up and down keys): Are used to select a menu item or option and/or changes values. Fast selection or change by holding down the up/down key.

Left arrow:


Is used to jump back one menu level



2.2.3 Single-handed remote control (Stimuplex® Remote Control)

As an alternative to the dial, the target stimulation current can also be set using the single-handed remote control, available as an optional accessory. With this feature, Stimuplex® HNS 12 can be easily operated under standard sterile conditions without an additional person.

The device recognizes the single-handed remote control automatically as soon as it is used. A symbol for the single-handed remote control appears in the LCD display above the battery symbol (active when dots appear, inactive when no dots and the downward arrow are displayed).

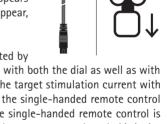

For safety reasons, the single-handed remote control is not activated by the device until the target stimulation current has been set to zero with both the dial as well as with the single-handed remote control. Afterwards it is possible to set the target stimulation current with the remote control. If required, please press the unlabelled key on the single-handed remote control (= lowers the value) until the symbol without dots disappears. The single-handed remote control is released when the target stimulation current is set to 0.00 mA and the remote control symbol is invisible.

When single-handed remote control is activated (symbol with 2 dots), the dial has no function. For safety reasons, neither the current range nor the stimulus duration can be increased when the single-handed remote control is activated, without having previously set the target current to zero. The automatic current adjustment (option) is also turned off. When the single-handed remote control is in use, the smallest adjustable stimulation current is approx. 0.09 mA due to technical reasons.

Attention! The target stimulation current can be modified during menu navigation, if the remote control is activated.

For safety reasons, if the single-handed remote control is disconnected from the Stimuplex® HNS 12, the device automatically resets the stimulation current back to zero and the dial is reactivated for setting the stimulation current.

2.2.4 Sound

Each stimulation pulse (preset stimulation current is flowing) generates a clear click or beep sound. The volume increases from a low pitch during maximum stimulus current to a high-pitch tone to audibly signal that the current threshold is being approached. However, changes in sound pitch can also be turned off in the "Setup" menu, "Tone", "Variable tone" so that the same sound is always heard regardless of the respective stimulation current.

The type of sound can be selected in the "Setup" menu, "Tone", "Mode". The user can choose between a click and a beep sound. When warnings (actual stimulation current < target stimulation current, target stimulation current < current threshold, automatic switch off, EEPROM) and errors are signaled, the click or beep changes to a louder and higher alarm pitch. Whenever any key is operated, a short, clear beep is audible. The volume can be adjusted in the "Setup" menu, "Tone", "Volume" at settings ranging from 0 (a very quiet ticking sound in the stimulus frequency; warning signals remain) to 8 (max. volume).

2.2.5 LED

- Green LED: Actual stimulation current = target stimulation current
- Yellow LED: Actual stimulation current = target stimulation current,
 - below the threshold current (if current threshold activated is, see Section 3.6)
- Red LED: deviation actual stimulation current < target stimulation current
 - (starting from a deviation of 0.04 mA), errors.


2.2.6 Display modes

The Stimuplex® HNS 12 has 4 basic display modes:

1. Stimulation mode

- With or without electrical charge (nC) display
- With or without single-handed remote control


 when in SENSe mode, the stimulus duration of the three stimulus impulses generated per second is shown instead of the electrical charge (nC)

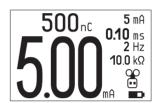



2. Stimulation mode with warning

(Actual stimulation current less than target stimulation current)

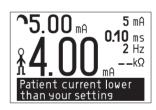

3. Menu mode

In the menu mode, various submenus and options can be selected by using the up and down arrows. The checkmark (v') symbolizes the selected value and/or the selected option. Each selection (displayed by a ">") can be changed by using the up and down arrow keys and must be confirmed by pressing the right arrow key, if applicable. The checkmark (v') then appears at the corresponding position.

■ MAIN MENU —

Current range
Stimulus duration
Frequency
Current threshold
Info
>Setup

4. Error display mode

(For example, indicating that the stimulation voltage is too low.)

If an error message appears in the LCD display, the device is automatically switched off within 8 seconds. During this process, the target stimulation current is set to zero and the stimulation voltage is turned off.

ERROR =

Impulse voltage 30V

Device defective Service required 8 s Switch off time



2.2.7 Menu structure

Main Menu (arrow keys MENU)

Current range: 0.00 - 5.00 mA

0.00 - 1.00 mA

Stimulus duration: 1.00 ms

0.50 ms (optional)

0.30 ms 0.10 ms

0.05 ms (optional)

Frequency: 2 Hz

1 Hz

SENSe (3 Hz)

Current threshold: On $(\sqrt{})$ or Off (no $\sqrt{})$

Info: Battery level, date, serial no., version

Distributor Manufacturer

USER INFO (future option, currently not available)

Activate infrared interface (future option, currently not available)

Setup: Tone: Volume: from 0 to 8

Mode: (click or beep) Variable tone: On $(\sqrt{})$ or Off (no $\sqrt{})$

Dial turns: 1 or 2 Contrast: 0 to 8

Automatic switch off: 0 to 10 min. (in min. increments)

15 to 30 min. (in 5 min. increments)

Date HH:MM - YYYY.MM.DD

Language GB – English

D - German
F - French
E - Spanish
I - Italian
P - Portuguese
S - Swedish
NL - Dutch

Setup: Language DK – Danish

N – Norwegian FIN – Finnish

GR – Greek RUS – Russian

H – Hungarian

RO – Romanian

CZ – Czech

SK – Slovak SLO – Slowenian

PL – Polish

TR – Turkish EST – Estonian

LV – Latvian

LT – Lithuanian BG – Bulgarian

BG – Bulgarian CN – Chinese

J – Japanese

Options: Factory standard: Yes (Y?)

Confirm using the right arrow key

El. charge nC: On $(\sqrt{})$ or Off $(\text{no }\sqrt{})$

Auto adjust current: On (\lor) or Off $(no \lor)$ Add. stimulus duration: On (\lor) or Off $(no \lor)$

SENSe: On $(\sqrt{})$ or Off $(\text{no }\sqrt{})$

The device is configured with the following factory settings on delivery:

Maximum current: 5.00 mA

Stimulus duration: SENSe (two impulses at 0.1ms, third impulse varies with current

strength from 0.15ms to 1.0ms)

Stimulation frequency: 3 Hz

Impedance: $k\Omega$ (is calculated)

Scale range (not displayed):

Auto switch off:

Current threshold:

1 turn (can only be changed in the menu)

min. (can only be changed in the menu)

Off (changes only possible in the menu,

is not reset by the option "Factory setting")

Language: English (can only be changed in the menu,

is not reset by the "Factory setting" option)

3.1 Switch on / Switch off (ON/OFF)

Switch on:



Press the ON/OFF key. After the key is released a self-test (not displayed) is run, the stimulation mode is displayed and the device is ready for operation.

or:

Hold down the ON/OFF key – the equipment data are displayed. After the key is released, a self-test is run as described above and the device is ready for operation.

Switch off:



Hold down the ON/OFF key (for approx. 1 sec.). After the display of a progress bar is completed, the display disappears. The device is switched off.

Please do not replace the battery while the device is turned on as this can damage the LCD display.

If the key is released within the 1-second switch-off phase, the device remains turned on and switches into the stimulation mode (home function).

If neither the dial nor the keys are operated for a period of 20 minutes, the stimulator switches off automatically. An audible warning signal will sound (4 Hz rhythm) during the last minute. In the "Setup" menu, "Auto switch off", the automatic switch-off time can be set to between 1 and 30 minutes using the up and down keys.

3.2 Selecting the current adjustment range

Factory setting on delivery:

O.00 to 5.00 mA max.

The two ranges are selectable:

- 0.00 to 5.00 mA

- 0.00 to 1.00 mA

The current range can be changed in two ways:

1. Selecting the current range for future switch-on procedures:

Switch on the device. Activate the Main Menu using the right arrow key and activate "Current range" using the right arrow key. Select the desired range using the up or down key (indicated by > on the left) and confirm with the right arrow key ($\sqrt{}$ appears on the right next to the selection). Switch off the device. The current range now selected will be configured when the device is switched on the next time.

2. Changing the current range during the application:

Press the mA key (the displayed value is highlighted by a border) and press the mA key again immediately (the second possible value is set and highlighted). This value is now activated for this application (the border disappears after approx. 3 sec.). If the mA key is pressed repeatedly while the border is activated, each of the other current ranges is set.

If the current range is changed during the application and a target current has been set, the target current may be reduced slightly automatically for technical reasons.

3.3 Selecting the stimulation current

The amplitude of the stimulation current (desired current) is set using the dial.

The resolution of the regulator increments is dependent on whether one or two dial turns have been set in the "Setup" menu (see Section 2.2.2).

When the single-handed remote control is connected and active, operation using the dial is not possible. The "automatic current adjustment" (see Section 4.2.7.3) is then likewise no longer active.

3.4 Selecting the stimulus duration

Factory setting on delivery: SENSe (two impulses fixed at 0.10ms while third impulse varies with current current strength from 0.15ms to 1ms).

Stimulus duration values can be selected from three numerical series:

- The first series includes 0.10 ms, 0.30 ms and 1.00 ms.
 (these values are equivalent to those on Stimuplex® HNS 11.)
 If these 3 values are not sufficient for your application, you can activate the menu item "Add. stimulus duration" in the menu "Setup", "Options" (√ appears next to "Add. stimulus duration" on the right). You can then choose between the values from the second series (below).
- The second series includes 0.05 ms, 0.10 ms, 0.30 ms, 0.50 ms and 1.00 ms.
- The third series conforms to the SENSe mode. SENSe can be enabled in the "Frequency" menu if the option SENSe is already enabled in the "Options" menu (√ appears on the right) and selected with the Hz key. In SENSe mode the ms key is deactivated, as the stimulus duration values are determined by the current set; the stimulus duration value is selected automatically when the current is changed.

Stimulus duration:
0.10 - 0.10 - 0.15 ms
0.10 - 0.10 - 0.17 ms
0.10 - 0.10 - 0.20 ms
0.10 - 0.10 - 0.23 ms
0.10 - 0.10 - 0.26 ms
0.10 - 0.10 - 0.30 ms
0.10 - 0.10 - 0.33 ms
0.10 - 0.10 - 0.36 ms
0.10 - 0.10 - 0.39 ms
0.10 - 0.10 - 0.42 ms
0.10 - 0.10 - 0.46 ms
0.10 - 0.10 - 0.49 ms
0.10 - 0.10 - 0.52 ms
0.10 - 0.10 - 0.55 ms
0.10 - 0.10 - 0.58 ms
0.10 - 0.10 - 0.62 ms
0.10 - 0.10 - 0.65 ms
0.10 - 0.10 - 0.68 ms
0.10 - 0.10 - 0.76 ms
0.10 - 0.10 - 0.84 ms
0.10 - 0.10 - 0.92 ms
0.10 - 0.10 - 1.00 ms

The stimulus duration setting can be changed in three ways:

1. Changing the stimulus duration for future switch-on processes:

Switch on the device and activate the Main Menu using the right arrow key. Use the down key to select "Stimulus duration" and activate the menu page using the right arrow key. Use the up or down key to highlight the desired ms value; select and confirm using the right arrow key (\sqrt appears on the right). Switch off the stimulator. The value now selected will be set when device is switched on the next time. This is valid except with the SENSe mode.

2. Changing the configured setting during an application (1st possible way):

Press the ms key. The current value is highlighted by a border. By repeatedly pressing the ms key, the next higher value appears from the numerical series selected above. Repeatedly press the ms key to switch on all values consecutively. The displayed value is immediately active. The border disappears after approx. 3 seconds.

3. Changing the configured setting during an application (2nd possible way):

Press the ms key. The current value is highlighted by a border. The stimulus duration can be extended or shortened with the up or down arrow keys in accordance with numerical series selected above. The new value is immediately active. The highlighting disappears after 3 seconds or when the ms key is pressed again or the ON/OFF key is pressed briefly.

3.5 Selecting the stimulation frequency

Factory setting on delivery: SENSe (3 Hz)
The selectable options are 2 Hz, 1 Hz or SENSe.

Two setting options are available to change the stimulation frequency:

1. Changing the stimulation frequency for future switch-on processes:

Switch on the device and activate the Main Menu using the right arrow key. Use the down key to highlight "Frequency" and activate the menu page using the right arrow key. Select the desired Hz setting or SENSe (if the option SENSe is already enabled in the "Options" menu) using the up or down arrow keys and confirm it using the right arrow key (\sqrt appears on the right). The value now selected will be set when device is switched on the next time.

2. Changing the configured setting during an application:

Press the Hz key. The set value is highlighted by a border. By repeatedly pressing the Hz key, the other value appears. Repeatedly pressing the Hz key switches on the values alternately. The displayed value is now active for this application, the highlighting disappears after approx. 3 seconds.

3.6 Current threshold display

Highlight the option "Current threshold" in the "Main Menu" and confirm using the right arrow key ($\sqrt{}$ appears on the right).

This option can be used to visually and acoustically indicate when the stimulus duration-dependent current threshold goes out-of-tolerance.

Visual warning:

The full digits of the target current display are converted to contoured digits when the current threshold drops below the preset level.

The LED flashes yellow (instead of green).

Acoustic warning:
 A warning signal is additionally sounded.

Stimulus duration ms	0.05	0.10	0.30	0.50	1.00
Current threshold mA	0.50	0.30	0.20	0.15	0.10



3.7 Checking the battery voltage

The battery level is displayed as a symbol in the stimulation mode on the bottom right of the LCD display. The filling level of the symbol indicates the battery's state of charge. The battery's state of charge is additionally indicated in the menu under the item "Info" (see below) in volt and percent. Press the right arrow key to activate the menu. Navigate with the up/down keys until the highlighting arrow ">" is in front of the menu item "Info". Press the right arrow key to open the "Info" menu. In the upper row, the battery's state of charge is indicated in % and volt.

3.8 Additional information - Menu info

The menu "Info" has 5 pages. With the up/down keys you can scroll through these pages.

The version number format has the following meaning: Version 1.003 x

1 = hardware revision number

003 = software revision number

x = language module revision number

In addition to the equipment data, distribution and manufacturer information is displayed. You can configure the User Info page yourself using an infrared interface (available as an accessory together with the corresponding service software) via a PC. The infrared interface (future option, not available

at the moment) is activated by selecting the "Infrared" page using the up/down keys in the "Info" menu.

The parameters and options desired by the user, which should be available when the device is switched on, can be configured via the menu. The arrow keys up/down and right/left are used for navigating through the menu structure.



These keys have the following functions:

Left arrow key: Go back one menu level

Right arrow key: Go down one menu level or select/confirm the highlighted value Up key: Jump to the upper menu items or increase the highlighted value Down key: Jump to the lower menu items or reduce the highlighted value

Please keep in mind that the desired and set values are immediately saved with the checkmark (\checkmark). If you forget this and Stimuplex® HNS 12 meanwhile switches off automatically, the previous values remain configured.

4.1 Setting switch-on values for stimulation parameters

Press the right arrow key MENU to activate the Main Menu.

4.1.1 Current adjustment range

The desired switch-on value for the current range can be set under the menu item "Current range".

Navigate with the up/down keys until the marking arrow (>) is in front of the menu item "Current range". Press the right arrow key to confirm the menu item, thereby the desired switch-on value is activated for the current range. The switch-on value is indicated by a checkmark ($\sqrt{}$).

Changing this menu item during an application has no impact on the previously set values. The changes will not be active until Stimuplex® HNS 12 has been switched off and restarted.

4.1.2 Stimulus duration

The desired switch-on value for the stimulus duration can be set under the menu item "Stimulus duration".

Navigate with the arrow up/down keys until the marking arrow (>) is in front of the menu item "Stimulus Duration". Press the right arrow key to confirm the menu item and thereby activate the adjustable stimulus duration values. Using the arrow up/down keys you can now select the desired switch-on value for the stimulus duration. Confirm your selection with the right arrow key. The switch-on value is now indicated by a checkmark ($\sqrt{}$).

Changes to the stimulus duration values in the menu item "Stimulus Duration" will not be active until Stimuplex® HNS 12 has been switched off and restarted. Changing this menu item during an application has no impact on the currently set values.

4.1.3 Frequency

The desired switch-on value for the stimulation frequency can be set under the menu item "Frequency".

Navigate with the up/down keys until the marking arrow (>) is in front of the menu item "Frequency". Press the right arrow key to confirm the menu item, thereby activating the desired switch-on value for the stimulation frequency. The switch-on value is indicated by a checkmark (v).

Changing this menu item during an application has no impact on the current settings. The changes will not be active until Stimuplex® HNS 12 has been switched off and restarted.

4.1.4 Current threshold display

The desired current threshold warning (visual and acoustical) can be activated or deactivated under "Main Menu" "Current threshold".

Highlight "Current threshold" using the arrow up/down keys and confirm and activate ($\sqrt{}$ appears on the right) or deactivate ($\sqrt{}$ disappears) with the right arrow key.

4.2 Setup

Press the right menu arrow key to go to the Main Menu.

Using the up/down keys, choose "Setup".

With the right arrow key, open the "Setup" menu and you can select from the following menu items: Tone – Dial turns – Contrast – Auto switch off – Date – Language – Options.

4.2.1 Tone

The desired volume, the sound mode and the dependency of the tone pitch on the target stimulation current can be set in this menu. On the menu page "Tone", use the up/down keys to highlight the submenu item "Volume" by opening it with the right arrow key. With the up/down keys, the volume can be set between 0 (lowest volume) and 8 (loudest volume). The setting is immediately active. Additional confirmation is not required.

In the submenu "Mode", the type of sound, i.e. click or beep, can be set with the up/down keys. Additional confirmation is not required here.

Use the option "Variable tone" to set whether the tone pitch should be dependent on the target stimulation current, or whether you desire a consistent stimulation tone over the entire setting range. Activate this option with the right arrow key ($\sqrt{}$ appears on the right) or inactivate it ($\sqrt{}$ disappears). The setting is active immediately.

4.2.2 Dial turns

The setting accuracy can be adjusted to suit to your needs by configuring the number of dial turns (one or two turns) for the entire current range of 0.00 mA or 5.00 mA. For maximum accuracy, select the two turn configuration and use the intermediate steps between the stops.

In the Main Menu, select the item "Setup" and open it with the right arrow key. Highlight the option "Dial turns" and open it with the right arrow key. With the up or down key, select 1 or 2 turns and activate this selection at the same time. Additional confirmation is not required. For safety reasons, the stimulation current is always reset to zero during this procedure.

4.2.3 Contrast on the LCD display

The contrast on the LCD display can be changed under the menu item "Contrast".

Open the "Setup" menu, select "Contrast" and open with the right arrow key. The contrast can be set from 0 to 8. The factory setting is 5.

When you change the value with the up or down keys, you can see the changes in the display contrast by checking the BIBRAUN logo. The displayed value is immediately activated and remains set after you have exited the menu.

4.2.4 Automatic switch off

The set time interval for the automatic switch off applies from the last time the stimulator has been operated. It is factory set to 20 minutes on delivery. Nevertheless, the switch-off time can be set to between 1 and 30 minutes. If the value is set to 0, the device does not switch off automatically.

Open the "Setup" menu, select the option "Auto switch off" and open it with the right arrow key. Using the up or down key, set the desired automatic switch-off time. The increment is 1 minute between 1 and 10 minutes; above this the increment is 5 minutes. Each setting is immediately activated.

4.2.5 Date and time

After every battery replacement, the date and time must be reset. Open the "Setup" menu, highlight "Date" and open with the right arrow key.

Order for the setting:

00:00

0000.00.00

Hour

Set the hour using the Up/down keys.

With the right arrow key, move the cursor (underline) to the next position.

The minutes are displayed. Set the minutes with the arrow up/down keys.

With the cursor over the right arrow key, go to the next position "Year" and set it with the up/down keys.

Afterwards, set month and day as described above.

The changes are immediately active.

4.2.6 Language

The desired language for menus and warning messages can be configured under the menu item "Language".

With the right arrow key, activate "Main Menu", highlight the "Setup" menu with the down key and open with the right arrow key. With the up or down key, highlight the menu "Language" and open with the right arrow key. Now, you have the option of highlighting the desired language with the up or down key and activating your selection with the right arrow key ($\sqrt{}$ appears on the right).

4.2.7 Options

This menu page offers the following options:

- 1. Factory standard restores factory settings.
- Electrical charge nC additional display of the amount of electricity to be given off in nanocoulomb.
- Auto current adjustment the current is adjusted automatically when the stimulus duration is changed.
- 4. Add. stimulus duration additional stimulus duration parameters.
- 5. SENSe SENSe option can be enabled / disabled

Use the right arrow key to activate ($\sqrt{}$ appears on the right) or deactivate these options ($\sqrt{}$ not visible).

4.2.7.1 Factory standard

Activation of this menu item resets all of the parameters back to the manufacturer's declared factory settings on delivery (see Section 3). However, this does not change the language setting or the current threshold display.

In the "Setup" menu, open the "Options" submenu. The "Factory standard" option is automatically highlighted and can be activated with the right arrow key. First, Y? appears to ask the user whether they really want to activate the factory settings. The factory standard are not reset until the right arrow key is pressed once more and $\sqrt{}$ appears on the right. Now, the following parameters are immediately activated:

Current range:	5.00 mA	Dial turns:	1
Stimulus duration:	SENSe	Contrast:	5
	(0.10ms, 0.10ms, 0.15ms-1.0ms)	Autom. switch off:	20 Min.
Frequency:	SENSe (3 Hz)	El. charge nC:	Off
Tone:	Веер	Auto adjust current:	On
Volume:	5	Add. stimulus duration:	Off
Variable tone:	On	SENSE:	On

4.2.7.2 Displaying the electrical charge of the stimulation pulse (electrical charge nC)

By activating this menu item, the electrical charge to be given off per stimulation pulse in nC is additionally displayed in the upper line on the LCD display (el. Charge in Nanocoulomb [nC] = current [μ A] x stimulus duration [ms], 1 nC = 10-9 As).

When in SENSe mode, the stimulus duration of the three stimulus impulses generated per second is shown instead of the electrical charge (nC), even if this option has been activated in the menu.

In the "Setup" menu, open "Options", highlight "El. charge nC" and activate with the right arrow key ($\sqrt{}$ appears on the right).

4.2.7.3 Current adjustment

This option allows automatic adjustment of the set stimulation current to the new settings when the stimulus duration is increased **during an application**. This prevents the set stimulation current from suddenly being given off for too long when the stimulus duration is increased without the stimulation current having been turned back to 0.00 mA.

When in SENSe mode, there is no automatic current adjustment, since the stimulus duration is fixed and can not be changed via the guick access button for impulse duration "ms".

Caution!

When the stimulus duration is lowered with the ms key and then increased again without the dial being operated in the interim, the target stimulation current is turned up to the old value again.

In the "Setup" menu, open "Options", highlight "Auto adjust current" and activate (\checkmark) or deactivate with the right arrow key.

4.2.7.4 Additional stimulus duration

With this option, you can add the stimulus durations 0.05 ms and 0.50 ms to the selection series (see Section 3.4). In "Setup", open "Options", highlight "Add. stimulus duration" and activate (v) or deactivate with the right arrow key.

4.2.7.5 SENSe option

With this option enabled, you can add the SENSe stimulation mode (see page 17) to the 2 Hz/1 Hz series. In "Setup", open "Options", highlight "SENSe" and activate ($\sqrt{}$) or deactivate with the right arrow key.

5.1 Testing the Stimuplex® HNS 12

A device check may be conducted as follows:

- Switch on the Stimuplex® HNS 12. After the "ON/OFF" key has been released and the self-test successfully completed, the device is ready for operation.
- With the stimulus duration set at 0.30 ms and the current adjustment range at 5.00 mA and the circuit open, check that the actual current equals zero over the entire adjustment range from 0.10 to 5.00 mA. (The warning "Patient current lower than your setting" must appear in the display, the warning signal must be audible and the LED in the stimulation frequency must light up red).
- Now, connect the electrodes (clip and plugs) using the 10 $k\Omega$ resistance supplied as an accessory. At this time, recheck the entire adjustment range to make sure that no warning is displayed, the LED lights up green or yellow, if applicable, and the sound is audible at the pitch of the selected stimulation frequency.

If the user wants to perform a safety check it is recommended to follow the test instructions in the Technical Service Manual.

5.2 Special technical features

The electrode connection is configured to prevent the electrode cable for the stimulation needles from being plugged in incorrectly and thereby creating the wrong polarity.

This reliable plug connection system ensures the correct polarity of the stimulation needle (negative) and skin electrode (positive).

As a result of the high peak stimulation voltage, the working spectrum is extremely broad, even when extremely small stimulation electrodes are used (fully insulated needles with pinpoint electrode). The Stimuplex® HNS 12 generates a negative, current-stabilized square pulse. Unlike conventional instruments of this type, the pulse of Stimuplex® HNS 12 is shaped by extremely fast active pulse drivers at both slopes. An output amplifier specially designed for this application has an extraordinarily wide dynamic range and generates reproducible settings even below 0.10 mA.

The latest microcomputer technology has made it possible to integrate performance features into the Stimuplex® HNS 12 that – until now – could only be provided by large and expensive systems. Some examples of the integrated features include the exact measurement of actual current and battery voltage, display of tissue impedance, menu structure and error messages available in various languages, configuration of user-specific options, the infrared interface, and the large high-contrast and user-friendly graphic display.

The internal quartz time base ensures precise stimulus durations and stimulus frequencies.

5.3 Technical data

Stimuplex® HNS 12 Type:

Instrument type: BF

9V (alkaline) Battery: 6 mA (8 mA max.) Power consumption:

Stimulation current: $\hat{I} = 5 \text{ mA (max.) } (0-12 \text{ k}\Omega)$

Stimulation voltage: $\hat{U} = 95 \text{ V (max.)}$

1 Hz / 2 Hz +1% / SENSe (3 Hz) Stimulation frequency:

Stimulus duration: 0.05 ms - 0.10 ms - 0.30 ms - 0.50 ms - 1.00 ms + 1%

SENSe (0.10ms - 0.10ms - 0.15ms to 1.0ms)

Allowable load impedance: $0 \text{ k}\Omega$ -12 k Ω Current measuring accuracy: + 0.02 mA

Impedance measuring range: 1 k Ω – 90 k Ω for target stimulation current > 0.5 mA Impedance measuring accuracy: $\pm 10\% / \pm 20\%$ for target stimulation current > 1mA / <= 1mA Sound pressure level: 51 dB / 54 dB / 63 dB for stimulation / warning / error

Weight: 250q

Operational environmental conditions: 0 - 50°C, max. 90 % relative humidity, no condensation

5.4 Battery

The battery charge status must be checked regularly. The battery should be replaced immediately whenever the battery symbol is flashing.

Please do not replace the battery when the device is turned on as otherwise the LCD display can become damaged.

When the battery voltage drops below 6 V, the nerve stimulator stops operating and issues an error message. Change the battery. While not performing a stimulation, you can save battery power by setting the stimulation current to 0.00 mA.

If the Stimuplex® HNS 12 nerve stimulator is not intended to be used for a long period of time, the battery must be removed to prevent leakage.

The battery compartment is located in the base of the nerve stimulator. Open the com- ☐ BATTERY partment. Change the battery - **ensuring correct polarity**. Then, close the compartment.



When inserting the battery, please insure that polarity is correct and that there is a firm connection between the battery and the contacts.

Use only 9 V alkaline manganese batteries (e.g. VARTA 4922, DURACELL MN 1604). These will provide you with an optimum operating time. Rechargeable batteries must not be used as they may cause the device to malfunction.

WARNING!

If the battery is leaking, the Stimuplex® HNS 12 should no longer be operated on the grounds of safety. Acid penetrating the inside of the instrument can damage or impair essential circuitry. It must be returned to the manufacturer for correct cleaning and a safety check.

5.5 Cleaning and disinfecting the Stimuplex® HNS 12

Use only soft, damp cloths to clean, wipe and disinfect the Stimuplex® HNS 12 and the accessories, e.g. electrode cable. Water or soap are particularly suitable for this purpose. Ensure that no moisture penetrates the Stimuplex® HNS 12.

Use only wipe disinfection, no spray disinfection! Avoid condensation!

White spirit or commercially available <u>methanol-free</u> disinfectant in an ethyl alcohol base can be used for disinfection.

Meliseptol® or white spirit can be used for wipe disinfection.

Caution! The following substances must not be used: trichloroethylene, acetone, butanone, benzene methyl ethyl ketone, benzene, methanol, cellulose thinner, and 2-propanol or any other organic solvents, acids and sodium hydroxide solution. Disinfectants containing iodine or dyes can discolor the housing and should not be used.

5.6 Maintenance and safety checks

Check the serviceable condition of the Stimuplex® HNS 12 and accessories on each occasion before use. A defective instrument must not be used. Electromedical equipment may only be repaired by the manufacturer or by an organization expressly authorized by the manufacturer. An order for repairs must be accompanied by a detailed description of the fault. A safety control check is not a requisite for this technical device.

➤ Refer to Section 10 for Specific Requirements for the US market.

5.7 Equipment logbook

- The operator is required to keep an equipment logbook on medical-technical devices according to MPG Class II a.
- 2. Mandatory entries in the logbook include:
 - 2.1 Designation and other information for identification of the device
 - 2.2 Certification about the function testing performed and instructions given in accordance with Section 5, para. 1 of the German Medical Devices Operator Ordinance (MPBetreibV)
 - 2.3 Name of the officer authorized in accordance with Section 5 para. 1 no. 2, time of instructional training and the name of the instructed persons.
 - 2.4 Deadlines and dates for performing prescribed safety checks and mechanical inspections and their results and the date of maintenance work including the name of the person or company responsible for carrying out these measures.

5.8 Notices, warranty

General notes

The cables of the nerve stimulator Stimuplex® HNS 12 should be positioned in such a way that they do not contact either the patient or other cables.

All accessories have to be visually inspected at regular time intervals. The insulation of the cables and plug connections must not exhibit any damage.

Only original accessories from B. Braun labeled with the CE sign should be used.

Refer to Section 5.10 for Instruments and accessoires

All electrical and electronic equipment provided with systems released after 13 August 2005, are marked with a symbol indicating that this equipment must undergo separate collection for disposal.

Figure:



Separate collection for electrical and electronic equipment

(currently applicable to EU community only).

In order to ensure an appropriate disposal of the device you have the possibility to give your device back to your B. Braun contact person or to return the device to Stockert GmbH free of charge.

Please decontaminate the device before shipping (see page 37).

Storage and shipping conditions:

0-50 °C, up to 90 % relative humidity, no condensation.

Warranty

Stimuplex® HNS 12 is guaranteed for two years against defects in material and workmanship provided that the device is used in accordance with the operating instructions. Accessories and wear parts, such as electrode cables, batteries, etc. are not covered by this warranty.

In addition, relevant sections of our General Sales Conditions apply, specifically Chapter IV No. 8.

Do not attempt to remove the control knob from the Stimuplex HNS12 for any purpose. Properly attaching the knob requires a special tool. This will void your warranty and result in a chargeable repair event, or replacement with a refurbished unit without warranty (if available) at B. Braun's sole discretion.

The Stimuplex HNS12 unit case should not be opened for any purpose. Opening the unit (even for inspection by Biomedical Engineering) will void your warranty. Malfunctions arising from opening the unit will result in a chargeable repair event, or replacement with a refurbished unit without warranty (if available) at B. Braun's sole discretion.

➤ Refer to Section 10.2 and 10.3 for Specific Requirements for the US market

5.9 Error messages

Stimuplex® HNS 12 checks the battery voltage periodically. If the voltage is less than 6.00 V, an error message will be displayed and the device will switch off automatically. The used battery must be replaced immediately.

Caution!

An empty battery can leak, damaging the device and making it unusable. If the device is not used for a longer period of time, it is imperative that the battery is removed. Any damage caused by a leaking battery is not covered under the warranty.

Stimuplex® HNS 12 conducts safety checks periodically.

In the event of the following malfunctions, the device switches off automatically within 8 seconds. During this time, the cause of the error is displayed (see 2.2.6.4).

1. Actual stimulation current > target stimulation current + tolerance

tolerance = 0.10 mA in the target current range = 0.00 - 0.49 mA tolerance = 0.20 mA in the target current range = 0.50 - 1.99 mA tolerance = 0.50 mA in the target current range = 2.00 - 5.00 mA

- 2. Max. stimulation voltage of the stimulation pulse less than 50 V
- 3. RAM (memory) error
- 4. CPU (computer) error
- 5. ROM (program memory) error
- 6. ADC (analog digital converter) error
- 7. Frequency error

Alarm Specification

	Error Message	(ALARM) Tone / Freq /	ALARM LED red	Info LED yellow	Info LED green	Reset Action	Comments Priority
1.	Current threshold 1Hz	1Hz		1Hz			Warning = low priority
2.	Current threshold 2Hz	2Hz		2Hz			Warning = low priority
3.	Current threshold SENSe (3 Hz)	1Hz		1Hz			Warning = low priority
4.	Patient current lower than your setting (1Hz)	1Hz	1Hz/ 5%				Warning = low priority
5.	Patient current lower than your setting (2Hz)	2Hz	2Hz/ 5%				Warning = low priority

	Error Message	(ALARM) Tone / Freq /	ALARM LED red	Info LED yellow	Info LED green	Reset Action	Comments Priority
6.	Patient current lower than your setting (SENSe)	1Hz	1Hz/ 5%				Warning = low priority
7.	Stimulation with 1 Hz	1Hz			1Hz		Information signal (Stimulation)
8.	Stimulation with 2 Hz	2Hz			2Hz		Information signal (Stimulation)
9.	Stimulation with SENSe	1Hz			1Hz		Information signal (Stimulation)
10.	ADC ERROR Device defective Service required 8 s Switch off time	Pulse pattern: 250ms- 250ms- 500ms LED on: 50ms Tone on: 10ms Tone frequency: 2,7kHz	Pulse pattern: 250ms- 250ms- 500ms LED on: 50ms Tone on: 10ms Tone frequency: 2,7kHz				Technical error = medium priority
11.	Impulse voltage 00V Device defective Service required 8 s Switch off time	Pulse pattern: 250ms- 250ms- 500ms LED on: 50ms Tone on: 10ms Tone frequency: 2,7kHz	Pulse pattern: 250ms- 250ms- 500ms LED on: 50ms Tone on: 10ms Tone frequency: 2,7kHz				Technical error = medium priority
12.	ROM ERROR Device defective Service required 8 s Switch off time	Pulse pattern: 250ms- 250ms- 500ms LED on: 50ms Tone on: 10ms Tone frequency: 2,7kHz	Pulse pattern: 250ms- 250ms- 500ms LED on: 50ms Tone on: 10ms Tone frequency: 2,7kHz				Technical error = medium priority
13.	RAM ERROR Device defective Service required 8 s Switch off time	Pulse pattern: 250ms- 250ms- 500ms LED on: 50ms Tone on: 10ms Tone frequency: 2,7kHz	Pulse pattern: 250ms- 250ms- 500ms LED on: 50ms Tone on: 10ms Tone frequency: 2,7kHz				Technical error = medium priority
14.	CPU ERROR Device defective Service required 8 s Switch off time	Pulse pattern: 250ms- 250ms- 500ms LED on: 50ms Tone on: 10ms Tone frequency: 2,7kHz	Pulse pattern: 250ms- 250ms- 500ms LED on: 50ms Tone on: 10ms Tone frequency: 2,7kHz				Technical error = medium priority
15.	Frequency ERROR	Pulse pattern: 250ms- 250ms- 500ms LED on: 50ms Tone on: 10ms Tone frequency: 2,7kHz	Pulse pattern: 250ms- 250ms- 500ms LED on: 50ms Tone on: 10ms Tone frequency: 2,7kHz				Technical error = medium priority

If any such error occurs, the device must not be used any longer and must be sent in for repair.

In the event of malfunctions that have no impact on the functional safety of the device, e.g. a deviation between internal parameters, Stimuplex® HNS 12 will first try to reconstruct these parameters. During this procedure, the message "EEPROM Corrrection" appears. The display automatically disappears after the error has been corrected successfully and the device is again ready for operation. If the error cannot be corrected, the factory set default values are used. The error message "K(U) EEPROM INIT" then appears during every switch-on procedure. In this case, the device might run at slightly changed stimulation settings. Please send in the device immediately to the manufacturer or distributor for repairs or testing.

Loading a language

If an error occurs when changing the language, the device will automatically switch back to English. During this procedure, the LCD may briefly go blank.

5.10 Instruments and accessories

The Stimuplex® HNS 12 should only be operated with the accessories and instruments referred to in this user manual.

Before every use check the accessories and instruments to make sure they are in serviceable condition and follow the care and disinfection instructions supplied (see 5.5).

> Refer to Section 10.4 for USA Reorder Numbers

Stimuplex® HNS 12 and Accessories, Spare parts, Stimuplex® and Contiplex® needles

Product description	cable length	Code no.	Sales unit/ pcs.
Stimuplex® HNS 12 Nerve Stimulator - with electrode cable for Stimuplex® D, Stimuplex® A and Contiplex® D needles		4892098	1
Special knob for sterile handling		4892283	1
Stimuplex® Pen for percutaneous nerve mapping	L = 1.25 m	4892099	1
Stimuplex® Remote Control for sterile one-hand operation	L = 1.6 m	4892216B	1
Finger rings for Stimuplex® Remote Control		4892224B	1
Stimuplex® Switch	L = 1.2 m	4892090	1
Battery cover for Stimuplex® HNS 12		4892094	1
Carrying case for Stimuplex® HNS 12		4892095	1
Test resistor for Stimuplex® HNS 12		4892096	1
Replacement electrode cable for		4892070	1
Stimuplex® HNS 12			

Product description	Needle Ø x length	Code no.	Sales unit/ pcs.
Stimuplex® D needles, 15° bevel			
25 G x 11/3"	0.5 x 35 mm	4894103N	25
25 G x 2 ¹ /8"	0.5 x 55 mm	4894111N	25
23 G x 1 ¹ /2"	0.6 x 40 mm	4894120N	25
23 G x 2 ³ /4"	0.6 x 70 mm	4894138N	25
22 G x 2"	0.7 x 50 mm	4894146N	25
22 G x 3 ¹ / ₈ "	0.7 x 80 mm	4894154N	25
22 G x 4 ³ /4"	0.7 x 120 mm	4894162N	25
20 G x 6"	0.9 x 150 mm	4894170N	25
Stimuplex® D needles, 30° bevel			
22 G x 1 ¹ / ₂ "	0.7 x 40 mm	4894189N	25
22 G x 2"	0.7 x 50 mm	4894197N	25
22 G x 3 ¹ /8"	0.7 x 80 mm	4894200N	25
Stimuplex® A needles, 30° bevel			
24 G x 1"	0.55 x 25 mm	4894251	25
22 G x 1"	0.70 x 25 mm	4894539	25
22 G x 1 ³ /8"	0.70 x 35 mm	4894367	25
22 G x 2"	0.70 x 50 mm	4894502	25
21 G x 2"	0.80 x 50 mm	4894375	25
21 G x 4"	0.80 x 100 mm	4894260	25
20 G x 6"	0.90 x 150 mm	4894278	25
Contiplex® D needles, 15° bevel			
18 G x 2 ¹ /8"	1.3 x 55 mm	4894219N	25
18 G x 3"	1.3 x 80 mm	4894296N	25
18 G x 4 ³ /8"	1.3 x 110 mm	4894294N	25
Contiplex® D needles, 30° bevel			
18 G x 2 ¹ /8"	1.3 x 55 mm	4894227N	25

Product description	Needle Ø x length	Code no.	Sales unit/ pcs.
Contiplex® D catheter set			
- Contiplex® catheter 0.41 x 0.71 x 400 mm			
with 20G Contiplex® D cannula, 15° bevel	1.1 x 33 mm	4892402N	10
with 20G Contiplex® D cannula, 15° bevel	1.1 x 55 mm	4892410N	10
- Contiplex® catheter 0.45 x 0.85 x 400 mm			
with 18G Contiplex® D cannula, 15° bevel	1.3 x 55 mm	4894235N	10
with 18G Contiplex® D cannula, 30° bevel	1.3 x 55 mm	4894243N	10
- Contiplex® catheter 0.45 x 0.85 x 1000 mm			
with 18G Contiplex® D cannula, 15° bevel	1.3 x 80 mm	4895819N	10
with 18G Contiplex® D cannula, 15° bevel	1.3 x 110 mm	4894391N	10
Contiplex® Tuohy set			
- Contiplex® catheter			
0.45 x 0.85 x 1000 mm and sideport			
with 18G Contiplex® Tuohy cannula	1.3 x 40 mm	331695N	10
with 18G Contiplex® Tuohy cannula	1.3 x 50 mm	331691N	10
with 18G Contiplex® Tuohy cannula	1.3 x 100 mm	331693N	10
with 18G Contiplex® Tuohy cannula	1.3 x 150 mm	331694N	10
Contiplex® S set			
- Contiplex® catheter			
0.45 x 0.85 x 1000 mm and sideport			
with 18G Contiplex® S needle, 20°	1.3 x 50 mm	4898750	10
with 18G Contiplex® S needle, 20°	1.3 x 100 mm	4898752	10
with 18G Contiplex® S needle, 20°	1.3 x 150 mm	4898754	10

44 6. References

1. Moore DC (1965) Regional Block. A handbook for use in the clinical practice of medicine and surgery. Thomas, Springfield III. (4th ed.)

- Ford DJ, Pither CE, Raj PP (1984) Electrical characteristics of peripheral nerve stimulators. Implications for nerve localization. Reg Anesth 9:73
- 3. Ford DJ, Pither CE, Raj PP (1984) Comparison of insulated and uninsulated needles for locating peripheral nerves with a peripheral nerve stimulator. Anesth Analg 63:925
- 4. Kaiser H, Niesel HC, Klimpel L (1988) Einfluß der Reizstromstärke der Nervenstimulation auf Latenz und Erfolg der hinteren Ischiadikusblockade. Regional-Anaesthesie 11:92
- Kaiser H, Niesel HC, Hans V (1990) Grundlagen und Anforderungen der peripheren elektrischen Nervenstimulation. Regional-Anaesthese 13:143
- Kaiser H, Niesel HC, Hans V, Klimpel L (1990) Untersuchungen zur Funktion peripherer Nervenstimulatoren für die Durchführung von Nerven- und Plexusblockaden. Regional-Anaesthesie 13:172
- 7. März P (1990) Kann bei der elektrischen Nervenstimulation aus der Intensität der Muskelkontraktion auf den Abstand zum Nerven geschlossen werden? Regional-Anaesthesie 13:179
- 8. Selander D, Edshage S, Wolff T (1979) Paraesthesiae or no paraesthesiae: nerve lesions after axillary block. Acta anaesthesiol. scand. 23:27

Additional reading:

Kaiser H: Die periphere Nervenstimulation.

In: Niesel HC (Hrsq) Regionalanästhesie, Lokalanästhesie, Regionale Schmerztherapie.

Thieme-Verlag Stuttgart New York (1994) 186 - 207

Kaiser H. Periphere elektrische Nervenstimulation 139 – 160

G. Meier / J. Büttner Allgemeine Aspekte peripherer Nervenblockaden der Extremitäten / Nervenblockaden an den oberen und unteren Extremitäten 237 – 401

in H.C. Niesel / H. van Aken Lokalanästhesie, Regionalanästhesie, Regionale Schmerztherapie – Thieme Verlag Stuttgart New York (2003)

Prithvi Raj P (Editor), Clinical practice of regional anaesthesia. Churchill Livingstone New York (1991)


Pinncock CA, Fischer HBJ, Jones RP, Peripheral nerve blockade. Churchill Livingstone New York (1996)

Scott DB, Introduction to regional anaesthesia. Mediglobe Fribourg (1989)

7. Appendix 45

Appendix A (per IEC 60601-2-10: 2000 + A1:2001 (Section 6.8.2.aa)a):

Output curve shape: rectangle negative, constant current

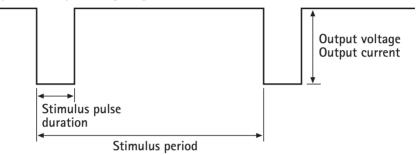

where

Stimulus duration =

0.05 ms or 0.10 ms or 0.30 ms or 0.50 ms or 1.00 ms

Stimulation frequency = 1 Hz, 2 Hz or SENSe


Output voltage

 $\hat{U} = 95 \text{ V (without load, open)}$

Output impulse current

 \hat{I} = maximal 1.00 mA or 5.00 mA (short circuit)

SENSe

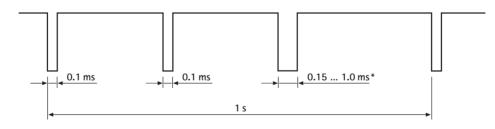

^{*} see page 26 for more details


Conversion table: stimulation current [mA] and pulse width [ms] in charge (nanocoulomb, nC)

Amplitude	Pulse Width	Charge	Pulse Width	Charge	Pulse Width	Charge
mA	ms	nC	ms	nC	ms	nC
0.1	0.1	10	0.3	30	1.0	100
0.2	0.1	20	0.3	60	1.0	200
0.3	0.1	30	0.3	90	1.0	300
0.4	0.1	40	0.3	120	1.0	400
0.5	0.1	50	0.3	150	1.0	500
0.6	0.1	60	0.3	180	1.0	600
0.7	0.1	70	0.3	210	1.0	700
0.8	0.1	80	0.3	240	1.0	800
0.9	0.1	90	0.3	270	1.0	900
1.0	0.1	100	0.3	300	1.0	1000
1.2	0.1	120	0.3	360	1.0	1200
1.6	0.1	160	0.3	480	1.0	1600
1.8	0.1	180	0.3	540	1.0	1800
2.0	0.1	200	0.3	600	1.0	2000
2.5	0.1	250	0.3	750	1.0	2500
3.0	0.1	300	0.3	900	1.0	3000
3.5	0.1	350	0.3	1050	1.0	3500
4.0	0.1	400	0.3	1200	1.0	4000
4.5	0.1	450	0.3	1350	1.0	4500
5.0	0.1	500	0.3	1500	1.0	5000

Appendix B:


Load impedance as a function of battery voltage

Setting: stimulation current = 5.00 mA

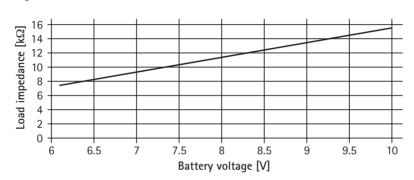


Load impedance as a function of battery voltage

Setting: stimulation current = 1.00 mA

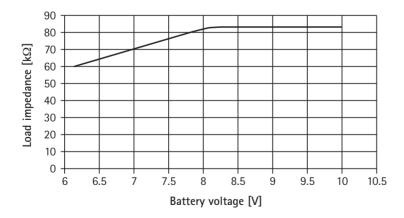


Actual stimulation current as a function of load impedance

Setting: target stimulation current = 5.00 mA, battery voltage = 9.0 V

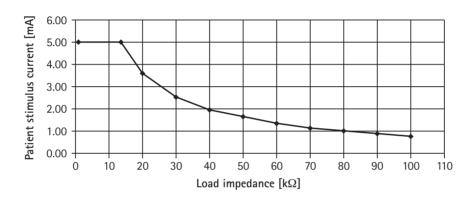


Output voltage as a function of load impedance

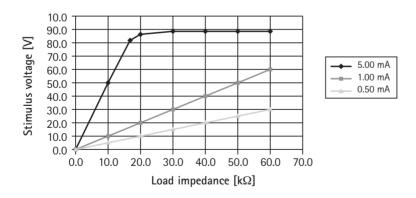


Target stimulation current as a function of adjustment control setting (relative to 0°)


Setting: 1 turn

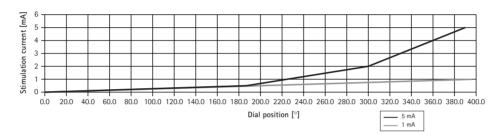


Setting: 2 turns

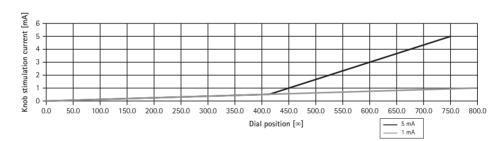

Appendix C (per Section 6.8.2.aa) b) IEC 60601-2-10: 2000 + A1:2001):

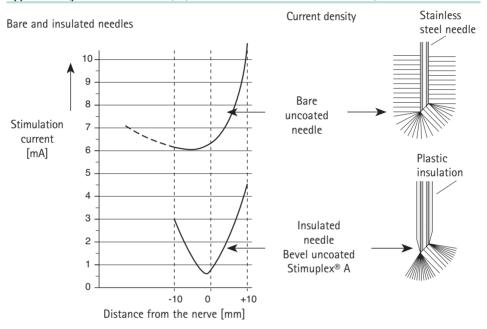

Stimuplex® D and Contiplex® D needles (Patent DE 3919666)

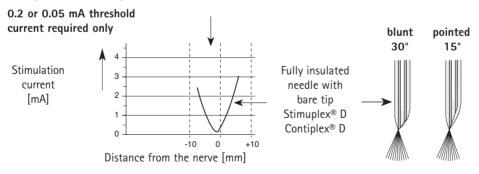

Appendix D:



EC-Declaration of Conformity

Medical product Class IIa

Manufacturer's name and address:

STOCKERT GmbH Bötzinger Straße 72

79111 Freiburg Germany

Product:

Type designation:

Nerve stimulator / Electrode Cable

Stimuplex HNS-12 and

Electrode cable for Stimuplex HNS 12

(Ordering-No. 4892070)

The designated product is in conformity with the European Directive

93/42/EEC

"Council Directive of 14th June 1993 on the approximation of the laws of the Member States concerning medical devices".

The technical documentation as submitted and full compliance with the standards listed below proves the conformity with the essential requirements of the above mentioned EC/Directive:

DIN EN 60601-1 Classification VDE 0750 Part 1/03.96 EN 60601-1:1990 + A1:1993 + A2:1995 IEC 60601-1:1988 + A1:1991 + A2:1995

and

EN 60601-1-2:2001 EN 60601-1-4:1996 EN 60601-1-6:2004 EN 60601-2-10:2000 + A1:2001

The compliance with the requirements of Annex II has been proved by the following certificates:

- Certificate (Nr. 0366/MDD/1607500-II) from VDE Institute, Germany, about the compliance with the requirements of Annex II Part 3.2 Council Directive 93/42/EEC for Medical products;
- Certificate (Reg.-Nr. 1607500/QM/06.96) from VDE Institute, Germany, about the implementation and maintenance of a QM-System in compliance with the requirements of DIN EN ISO 9001:2000.
- Certificate (Reg.-Nr. 288842 MP23CMDR) from DQS GmbH, Germany, about the implementation and maintenance of a QM-System in compliance with ISO 13485:2003
- Certificate (Reg.-Nr. 1607500/QM/06.96) from VDE Institute, Germany, about the implementation and maintenance of a QM-System in compliance with ISO 13485:2007.

Freiburg, February 10th 2009

Dominika Schuler Business Manager STOCKERT GmbH

Display symbols

Battery



Target stimulation current



Actual stimulation current



Stimulus duration



1 Hz



2 Hz



SENSe (description see page 17)



Infrared transmission



Volume



Shut-off procedure



Remote control active (Single-handed remote control active)



Remote control inactive (Single-handed remote control inactive)



Patient-coupled circuit open

Symbols on device rear panel

BF♠

Application part, type BF



Refer to accompanying documents



Remote Control (Single-handed remote control)



Stimulation current instrument (needle)



Battery

MD...

Date of manufacture/year/month

MEDICAL ELECTRICAL



EQUIPMENT CLASSIFIED BY UNDERWRITERS LABORATORIES INC.® WITH RESPECT TO ELECTRIC SHOCK, FIRE, AND MECHANICAL HAZARDS ONLY IN ACCORDANCE WITH UL 60601-1 AND CAN/CSA C 22.2 NO. 601.1 40 GF



Separate collection for electrical and electronic equipment (currently applicable to EU community only)

C € 0366 Mandatory connormer, the European Economic Area Mandatory conformity mark in (EEA) with the number of notified body

Table 1

Guidelines and manufacturer's declaration concerning electromagnetic emissions

Stimuplex® HNS12 is intended for use in an environment as stated below. The customer or user of Stimuplex® HNS 12 should ensure that the device is operated in this type of environment.

Emitted interference	Compliance	Electromagnetic environment guidelines
HF emissions according to CISPR 11	Group 1	The Stimuplex® HNS 12 utilizes HF energy for its internal function exclusively. Therefore, its HF emissions are very low and are unlikely to interfere with electronic equipment in the proximity.
HF emissions according to CISPR 11	Class B	The Stimuplex® HNS 12 is suitable for use in other facilities than the residential
Harmonic current emissions according to IEC 61000-3-2	Not applicable	environments and such facilities that are directly connected to a public mains
Voltage fluctuations, flicker emissions according to IEC 61000-3-3	Not applicable	network that also supplies buildings used for domestic purposes.

Table 2

Guidelines and manufacturer's declaration concerning electromagnetic immunity to interference

Stimuplex® HNS12 is intended for use in an environment as stated below. The customer or user of Stimuplex® HNS 12 should ensure that the device is operated in this type of environment.

Immunity tests	IEC 60601 test level	Compliance level	Electromagnetic environment guidelines
Electrostatic discharge (ESD) according to IEC 61000-4-2	±6 kV Contact discharge mode	±6 kV Contact discharge mode	The floors should be made of wood or cement or paved with ceramic tiles. If the floor is made of
	±8 kV Air discharge mode	±8 kV Air discharge mode	synthetic material, the relative humidity must be a minimum of 30%.
Fast transient electrical disturbances/bursts according to IEC 61000-4-4	±2 kV for mains power lines ±1 kV for in and output lines	Not applicable	Not applicable
Surges according to IEC 61000-4-5	±1 kV Differential mode voltage ±2 kV Common mode voltage	Not applicable	Not applicable
Voltage dips and interruptions according to IEC 61000-4-11	$< 5\% \ U_T (> 95\% \ dip$ in $U_T)$ for $1/2$ period $40\% \ U_T \ (60\% \ dip$ in $U_T)$ for 5 periods $70\% \ U_T \ (30\% \ dip$ in $U_T)$ for 25 periods	Not applicable	Not applicable
	< 5% U _T (> 95% dip in U _T) for 5 s		

Immunity	IEC 60601	Compliance	Electromagnetic environment guidelines
tests	test level	level	
Power frequency magnetic fields (50/60 Hz) according to IEC 610004-8	3 A/m	3 A/m	Power frequency magnetic fields should correspond to the values typical to those found in commercial and hospital environments.

Remark: U_T is the mains alternating currents prior to use at the test level.

Table 3
Guidelines and manufacturer's declaration concerning electromagnetic immunity to interference

Stimuplex® HNS12 is intended for use in an environment as stated below. The customer or user of Stimuplex® HNS 12 should ensure that the device is operated in this type of environment.

Immunity tests	IEC 60601 test level	Compliance level	Electromagnetic environment guidelines		
HF conducted	3 Veff Not		Mobile and portable radio frequency communication equipment should not be used at a lesser distance to Stimuplex® HNS 12 including its lines than the recommended separation distance which is calculated according to the equation applicable to the modulation frequency. Recommended separation distances: $d = 3,5/V1\sqrt{P} \text{ for } 150 \text{ kHz to } 80 \text{ MHz}$ $d = 3,5/E1\sqrt{P} \text{ for } 80 \text{ MHz to } 800 \text{ MHz}$ $d = 7/E1\sqrt{P} \text{ for } 800 \text{ MHz to } 2,5 \text{ GHz}$ With P as rated power of the transmitters in watts		
disturbances according to (W) IEC 61000-4-6	150 kHz to 60 MHz	applicable	according to the transmitter manufacturer's information and d as recommended separation distance in meters (m).		
HF radiated- disturbances according to IEC 61000-4-3 test methods	3 V/m 80 MHz to 2,GHz	4 V/m	The field strength of stationary radio transmitters should be less than the compliance level at all frequencies based on on-site ^a testing ^b . Malfunctions are possible in the environment of equipment that bears		
Remark 1: Remark 2:	this symbol. The higher frequency range is applicable at 80 MHz and 800 MHz. These regulations may not apply in all cases. The distribution of electromagnetic fields is affected by absorptions and reflections of buildings, objects and persons.				

a The field strength of stationary transmitters, such as base stations for mobile phones and mobile land (radio) telephones, amateur radio stations, AM and FM radio broadcasting and television transmitters, can in theory not be exactly determined beforehand. An inspection of the location should be considered to determine whether there are any stationary transmitters creating an electromagnetic environment. If the measured field strength at the location where Stimuplex® HNS 12 is operated exceeds the above-stated compliance level, Stimuplex® HNS 12 should be monitored

to verify that it functions properly. If abnormal performance features are observed, additional measures may be required, such as changing the orientation of Stimuplex® HNS 12 or moving it to another location.

b The field strength should be less than 3 V/m over a frequency range of 150 kHz to 80 MHz.

Table 4

Recommended separation distances between portable and mobile HF telecommunication devices and Stimuplex® HNS 12.

Stimuplex® HNS12 is intended for operation in an electromagnetic environment in which HF disturbances are controlled. The user of the Stimuplex® HNS 12 can help prevent electromagnetic malfunctions by maintaining a minimum distance between portable and mobile HF telecommunications equipment (transmitters) and the Stimuplex® HNS 12, dependent on the output power of the communications equipment as listed below.

Rated power of the	Separation distance as a function of modulation frequency (m)				
transmitter (W)	80 MHz to 800 MHz	800 MHz to 2.5 GHz			
	$d = 0.88\sqrt{P}$	$d = 1.75\sqrt{P}$			
0.01	0.09	0.18			
0.1	0.28	0.55			
1	0.88	1.75			
10	2.77	5.53			
100	8.75	17.5			

For transmitters whose maximal rated power is not listed in the table above, the recommended separation distance d in meters (m) can be calculated by applying the equation that belongs to each column, where P is the maximum rated power of the transmitter in watts (W) as stated in the transmitter manufacturer's information.

Remark 1: The higher frequency range applies at 80 MHz.

Remark 2: These regulations may not apply in all cases. The distribution of electromagnetic fields

is affected by absorptions and reflections of buildings, objects and persons.

To U.S.A/Canada Customers:

The user manual packaged with the nerve stimulator includes all the procedures and requirements for operation the Stimuplex® HNS 12 Nerve Stimulator. Please heed all warnings and recommendations presented in the manual. For our US and Canada customers only, the following revisions and/or additions should be used in place or in conjunction with the information provided within the manual.

Thank you.

B. Braun Medical Inc.

10.1 Addition to Page 37 of the Manual - "5.6 Maintenance and safety checks"

Service and Technical Support:

If, during the initial warranty period, the Stimuplex® HNS 12 fails to respond to the operating or troubleshooting procedures listed in this manual and the cause cannot be determined, discontinue using the unit and contact B. Braun Medical Customer Service for further instruction regarding Warranty Service Support and Repair:

B. Braun Medical Inc. 824 Twelfth Avenue Bethlehem, PA 18018-3524 Ph: 1-800-227-2862

Should it be necessary to return the unit for repair, Customer Service will provide a Returned Goods Authorization (RGA) number and instruction for the return. Carefully package the unit (preferably in the original case), mark it with the RGA number and ship according to Customer Service instruction. B. Braun Medical cannot assume any responsibility for loss and damage to returned units while they are in transit.

Please contact B. Braun Medical Clinical and Technical Support with product function complaints:

B. Braun Medical Inc. Clinical and Technical Support 824 Twelfth Avenue Bethlehem, PA 18018-3524

Ph: 1-800-854-6851 Fax: 1-610-758-9020 You will be asked to provide the following information with each complaint:

- 1. Unit Serial Number
- 2. Verification of last battery replacement date
- 3. Verification of completion of unit Short Test
- 4. contact name, address, phone number and e-mail address
- 5. Account name and /or number
- 6. Any information which might aid in the investigation of the complaint

Also please note that no Inspection Sheet has been included with this unit as it does not contain any pertinent information to our U.S.A. customers.

10.2 Change from Page 38 of the Manual - "5.8 Notices, warranty"

Stated in manual: "Only original accessories from B. Braun labeled with the CE sign should be used".

Revision: B. Braun Medical Inc. does not have or require the CE mark on its product packaging. However, only stimulation needles and Stimuplex® HNS 12 Accessories offered by B. Braun and labeled with B. Braun logos should be utilized with this nerve stimulator.

10.3 Change from Page 38 of the Manual- "5.8 Notices, warranty"

The existing warranty statement should be replaced in whole with the following:

- B. Braun Medical Inc., hereby warrants to the original Customer that each Stimuplex® HNS 12 shall be free from defects in material and workmanship when used and maintained in accordance with the Operation Manual. All warranties shall expire two years from the date of shipment from B. Braun.
- B. Braun's sole obligation, and Customer's sole remedy, for a breach of the foregoing warranty shall be, at B. Braun Medical's option, either to repair or replace the defective Stimuplex® HNS 12 at no charge.

Customer shall bear all risk of loss or damage to returned goods while in transit. In the event no defect or breach of warranty is discovered by B. Braun upon receipt of the product, the product will be returned to Customer at Customer's expense and Customer will reimburse B. Braun for the transportation charges, labor and associated charges incurred in testing the allegedly defective product. The defective product should be returned promptly to B. Braun Medical properly packaged, postage, prepaid, with appropriate identification per the instructions of B. Braun Medical Customer Service. All repairs or services, not covered under the warranty, will be billed at B. Braun's then current rates.

B. Braun's warranty hereunder shall not apply if: (I) the Stimuplex® HNS 12 is not used in accordance with the instruction in the Operation Manual; (II) any repairs, alterations or other work has been performed by Customer or others on such item, other than work performed with B. Braun's authorization and according to its approved procedures; (III) the alleged defect is a result of abuse, misuse, improper maintenance, accident or the negligence of any party other than B. Braun; or (IV) used with any needles or devices not manufactured by B. Braun Medical or not intended for use with the Stimuplex® HNS 12. The warranty set forth herein is conditioned upon proper storage, installation, use and maintenance in accordance with applicable written recommendations of B. Braun.

Except as expressly provided herein, B. Braun makes no warranty of any kind, expressed or implied, with respect to the Stimuplex® HNS 12, including; but not limited to, the implied warranties merchantability and fitness for a particular purpose. The sole and exclusive remedy for breach of any warranty is limited to the remedies provided in the above paragraphs.

B. Braun shall not be liable to customer for any indirect, incidental, special, consequential or punitive damages (including any damage for lost profits) arising out of or in connection with furnishing of the Stimuplex® HNS 12 or service hereunder, or the performance, use of, or inability to use the Stimuplex® HNS 12, or otherwise, whether based on contract, warranty, tort, including without limitation, negligence or any other legal or equitable theory.

10.4 Change from pages 40 – 42 of the User manual – "Stimuplex® HNS12 and Accessories, Spare Parts, Stimuplex® and Contiplex® needles"

Cross Reference Guide for USA Re-Order Numbers

Product description	Cable length	USA Reorder Number	USA Units per Case
Stimuplex® HNS 12 Nerve Stimulator - with electrode cable for Stimuplex® D, Stimuplex® A and Contiplex® D needles		4892098	1
Special knob for sterile handling		333578	1
Stimuplex® Pen for percutaneous nerve mapping	L = 1.25 m	4892099	1
Remote Control for sterile one-hand operation	L = 1.6 m	333559	1
Finger rings for remote control RC		333551	1
Stimuplex® Switch	L = 1.2 m	4892090	1
Stimuplex® HNS11/HNS12 Replacement cable		333576	1

Product description	Needle Ø x length	USA Reorder Number	USA Units per Case
Stimuplex® D needles, 15° bevel 25 G × 1 ¹ / ₃ " 23 G × 2 ³ / ₄ " 22 G × 3 ¹ / ₈ " 22 G × 4 ³ / ₄ "	0.5 x 35 mm 0.6 x 70 mm 0.7 x 80 mm 0.7 x 120 mm	333670 333672 333674 333676	25 25 25 25 25
Stimuplex® D needles, 30° bevel 22 G x 2" 22 G x 3 ¹ /8"	0.7 x 50 mm 0.7 x 80 mm	333689 333684	25 25
Stimuplex® A needles, 30° bevel 24 G x 1" 22 G x 1" 22 G x 13/8" 22 G x 2" 21 G x 4" 20 G x 6"	0.55 x 25 mm 0.70 x 25 mm 0.70 x 35 mm 0.70 x 50 mm 0.80 x 100 mm 0.90 x 150 mm	333694 333691 333693 333690 333686 333680	25 25 25 25 25 25 25
Contiplex® D catheter set			
- Contiplex® D catheter 0.41 x 0.71 x 400 mm			
with 20G Contiplex® D cannula, 15° bevel with 20G Contiplex® D cannula, 15° bevel	1.1 x 33 mm 1.1 x 55 mm	331681 331686	12 12
- Contiplex® catheter 0.45 x 0.85 x 400 mm			
with 18G Contiplex® D cannula, 15° bevel with 20G Contiplex® D cannula, 30° bevel - Contiplex® catheter	1.3 x 55 mm 1.3 x 55 mm	331680 331685	12 12
0.45 x 0.85 x 1000 mm			
with 18G Contiplex® D cannula, 15° bevel	1.3 x 110 mm	331687	12
Contiplex® Tuohy set			
- Contiplex® catheter 0.45 x 0.85 x 1000 mm and sideport			
insulated Tuohy type CNB 150; 18 G insulated Tuohy type CNB 200; 18 G insulated Tuohy type CNB 400; 18 G insulated Tuohy type CNB 600; 18 G	1.3 x 40 mm 1.3 x 50 mm 1.3 x 100 mm 1.3 x 150 mm	331695 331691 331693 331694	12 12 12 12

Date of last revision February 2009



B. Braun Melsungen AG

Carl-Braun-Straße 1 34212 Melsungen Germany Tel +49 (0) 5661-71-0

www.bbraun.com